andrew james

Sandwich Press

Please read the manual fully before using the appliance and keep the manual safe for future reference.

Contents page

Important safeguards	Page 3
Appliance components diagram	Page 5
Before using the appliance	Page 6
Using your sandwich press to make sandwiches and meats	Page 6
Tips for getting the best results	Page 7
Care and cleaning	Page 8
Electrical information	Page 9
UK and EU Guarantee	Page 10
Disposal of the appliance Contact details	Page 11 Page 11

Important safeguards

When using any electrical appliance, basic safety precautions should always be followed, including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not

place the unit on a hot surface.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.
- Always switch the appliance off after use and allow a cooling period to occur before storing the appliance.

Appliance components diagram

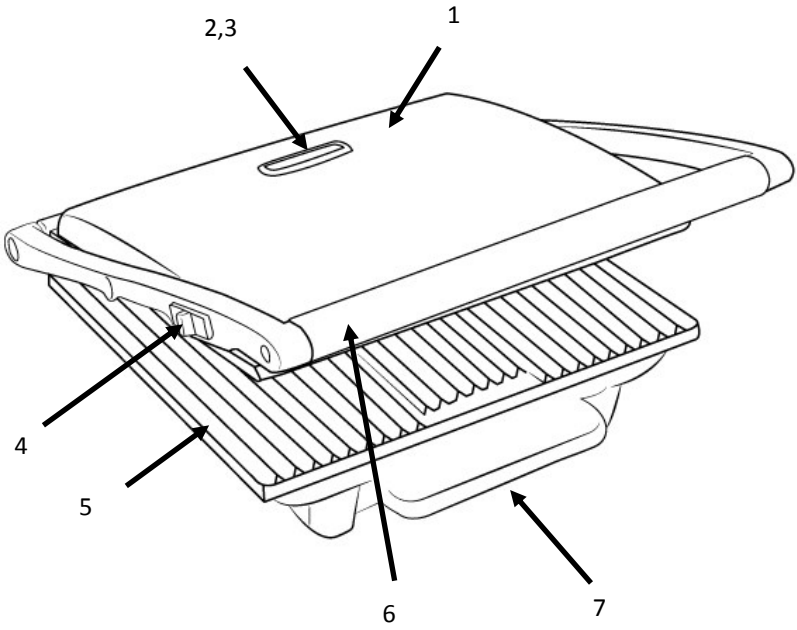

1. Stainless steel body	5. Non-stick cooking plates
2. Power on indicator lights (red)	6. Cool touch handle
3. Working indicator lights (green)	7. Oil drip pan
4. Safety latch	

Before using the appliance

You must read all instructions carefully before using this appliance

1. Remove all packaging material and check to see that the sandwich press is in good condition. The appliance must not have cracks on the unit and no damage to the cord/plug. Do not discard any packaging until all accessories have been found.
2. You must confirm that the voltage indicated on the sandwich press corresponds with the voltage of the electrical plug
3. Remove any adhesive labels or stickers before use.
4. Carefully wipe the exterior and the cooking plates with a warm, soft, damp cloth to remove any dust that may have accumulated. Wipe dry with a clean towel.
5. When using the appliance, provide adequate air space above and on all sides for circulation.
6. Always use the sandwich press on a dry level surface.

Using your Sandwich Press to make sandwiches and cook meats

1. Lightly grease the cooking plates with a small amount of margarine or cooking oil.
2. Always preheat the sandwich press before use.
3. Plug the sandwich press into the power supply. The red “power on” indicator light will illuminate, allow the sandwich press to preheat in the closed position until the green “working” indicator light illuminates.
4. When used for the first time, the sandwich press may give off a slight odour and smoke haze. This is normal and is due to the initial heating of internal components.
5. During this time, prepare the sandwich and place it onto the bottom cooking plate. Always place sandwiches towards the rear of the bottom cooking plate.

6. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the sandwich. Please note, the safety latch should not be used to clamp down the top plate when the sandwiches are in the sandwich press. The weight of the top cooking plate will gradually press down the sandwich during the cooking process.

7. Toasting should take approx. 3-6 minutes, depending on the bread, filling and personal taste. The sandwich press toasts both sides of bread at the same time.

8. Once the sandwich has cooked, open the lid and remove it from the cooking plates with a plastic or wooden spatula. Do not use sharp objects or metal as this may damage the non-stick surface.

9. It is normal for the green indicator light to switch on and off during cooking, as the thermostat keeps the sandwich maker at the correct cooking temperature.

10. If you wish to continue making sandwiches, wait until the green indicator light illuminates before you put new sandwiches in the sandwich press.

11. When cooking meats please note:

- The cooking times will be longer than that of bread and will vary between different types of meat.
- The amount of fat produced will increase, be careful of fat dripping onto the work surface.
- When oils and fats are present during cooking, there is a risk of splashes. Please take care when opening the top cooking plate, it is advised that oven gloves should be worn at all times.

Tips for the best results:

1. Breads with a high sugar content (fruit loaf, etc.) will toast more quickly than plain sandwich breads.

2. Any type of bread can be used, white, wholemeal, kibbled wheat or wholegrain.

3. The sandwich press is ideal for toasting focaccia, Turkish bread, baguettes as

well as bread rolls.

4. Try to use canned or pre-cooked fruit as fresh fruit may give off excessive juices when heated.

5. It is not necessary to butter the outside of all breads as the sandwich press has non-stick cooking plates. However, to encourage even browning of bread or when using stale bread, spread a small amount of butter on the surface of the bread.

6. **BE CAREFUL** when biting into your sandwiches containing fillings such as cheese, tomato or jam as they retain heat and can burn if eaten too quickly. Allow to cool for a few minutes before enjoying.

Care and cleaning

1. You must unplug the power cord from the electrical outlet and allow the sandwich press to cool down properly with the grill plates in an open position before you begin to clean it.

2. Wipe the cooking plates with a soft, damp cloth. Always clean your sandwich press after each use to prevent a build-up of baked on foods.

3. Avoid using metal or sharp utensils as they will scratch the non-stick surface.

4. Never use toxic cleaners, abrasive cleaners or wire wool as they may damage the plastic, non-stick surface and the exterior finish.

5. Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, once the filling has softened. Simply wipe with a dampened cloth.

6. Use the safety latch to fasten the plates together. Store the sandwich press in its box or in a clean, dry place.

Caution: Always use protective gloves that are heat resistant when handling the product to avoid injury.

Electrical information

Warning:

If the appliance is double insulated indicated by the double insulated symbol: ⧈ it should not have an earth wire or earth connection.

Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

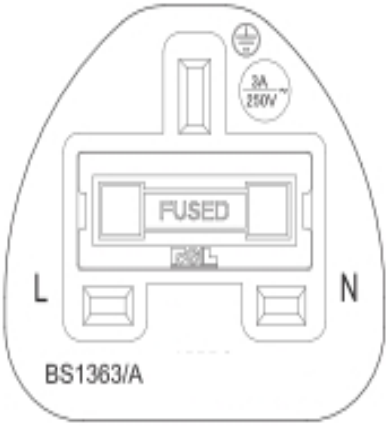

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug.
Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent it from engaging into a socket.

If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/

We reserve the right to amend specification as part of our policy of continual product improvements

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to
www.andrewjamesworldwide.com
Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Disposal of the appliance

Please note that this Andrew James product is marked with this symbol:

This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.

In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the E.U. can take used equipment to special recycling stations free of charge. In certain member states used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

Contact details

Andrew James UK LTD
Unit 1
P C Henderson Premises
Bowburn North Industrial Estate
Bowburn
Co Durham
DH6 5NG

Customer Service / Technical Support- Telephone 0844 335 8464

Customer Service/ Technical Support Email:
customerservices@andrewjamesworldwide.com
Website: www.andrewjamesworldwide.com

Copyright Andrew James